




## Externe Antenne - Installation für grössere Funkreichweite

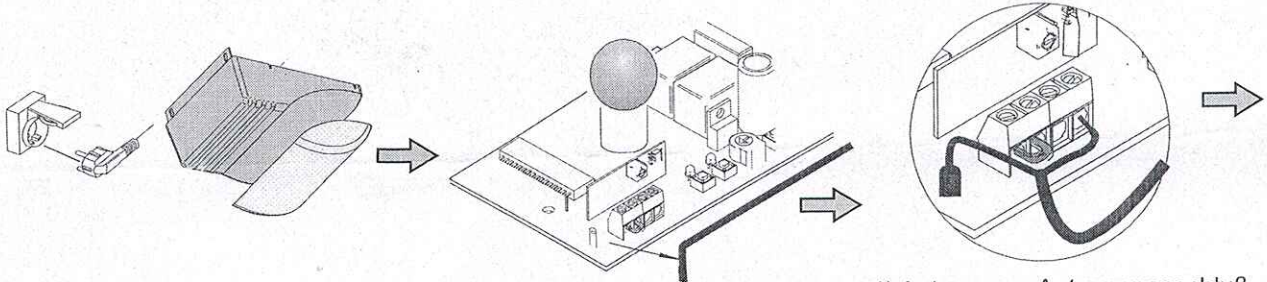

- 1) Stecker ziehen
- 2) Lichthaube abnehmen

- 3) Mitgelieferte Antenne entfernen


- 4) Antenne an Antennenanschluß und an Erdklemme anschließen, ggf. Kabelschuh entfernen und Kabel abisolieren (abhängig nach Typ)

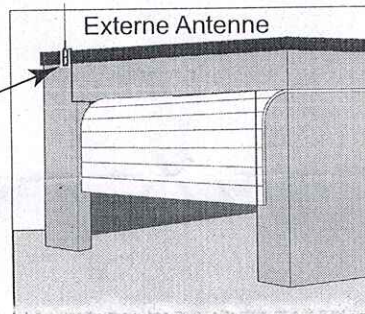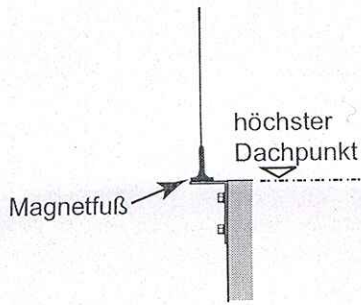

Technische Daten	
Artikel Nr.	B 260.59
Frequenz (MHz)	433.92
max. Leistung (W)	50
Eingangswiderstand $\Omega$	50
Kabellänge (mm)	6000
Temperatur (C°)	-40° +70°

- 5) Antenne nach aussen ziehen
- 6) Lochwinkel an Wand anbringen oder Antenne direkt auf Metallfläche setzen.
- 7) Netzstecker wieder einstecken und Reichweite mit Handsender testen



## External Antenna - Installation for extended Range

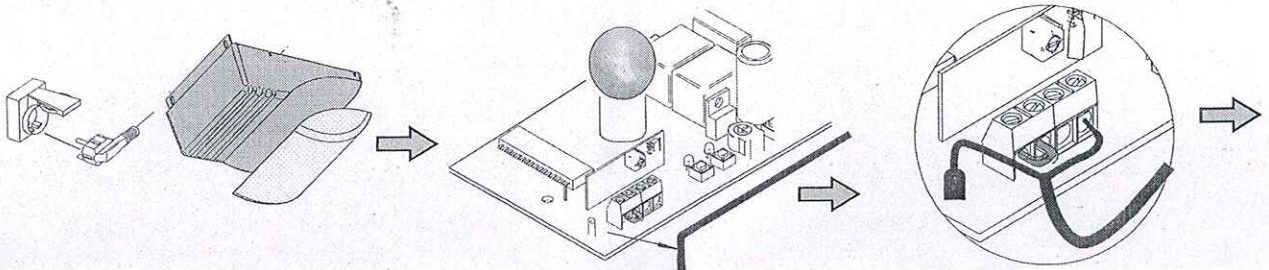

- 1) Pull plug
- 2) Remove diffuser

- 3) Remove supplied antenna

- 4) Connect new antenna to antenna and earth terminal, where required, remove cable shoe (according to type)

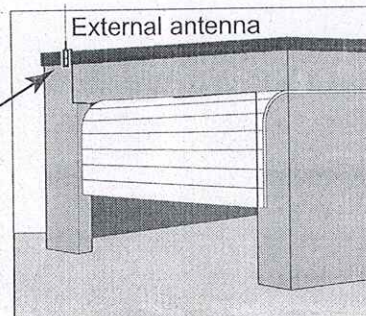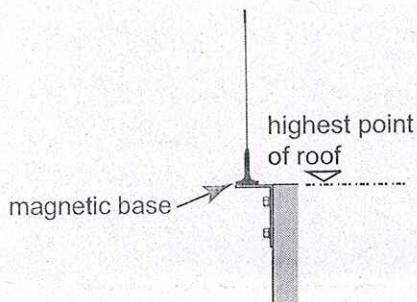

Technical data	
Item Nr.	B 260.59
Frequency (MHz)	433.92
max. Power (W)	50
Input impedance $\Omega$	50
Cable length (mm)	6000
Temperature (C°)	-40° +70°

- 5) Pull antenna towards outside
- 6) Affix bracket on wall or fix antenna direct to metallic surface
- 7) Connect plug and test reach with handheld transmitter